

OBEX Mobile Screen

Installation Instructions




1. Place L brackets around the base of the screen frame.



4. Lean the screen on its side and attach the casters to the base plate using a screw driver.



2. Attach L Brackets to screen frame using the black metal screws.

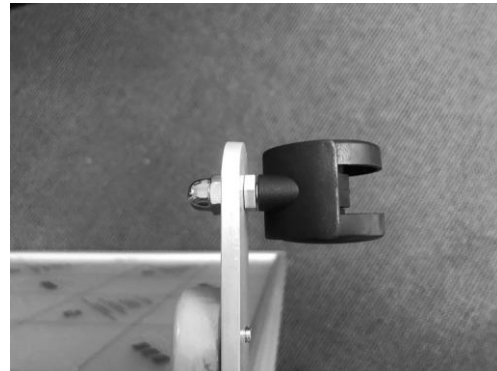

5. Secure the casters using the provided bolt caps.



3. Attach the base plate to the L brackets using the provided hex screws and allen wrench.



6. Place the screen in the desired location.