



# CUBICLE DOOR INSTALLATION



Scan QR code for  
video tutorial

OBEX P. E., Inc - 2460 Grand Ave, Vista CA 92081  
1-800-315-6239



**1. LEAN DOOR UP AGAINST CUBICLE WALL.**



**2. REMOVE CAP FROM BOTTOM BRACKET AND LOOSEN SCREW.**



**3. PLACE BRACKET AROUND THE EDGE OF THE CUBICLE WALL. SLIDE BRACKET UP TO REST UNDERNEATH DOOR GUIDE RAIL.**



**4. BE SURE TO LEAVE SPACE BETWEEN THE BOTTOM OF THE DOOR GUIDE RAIL AND BRACKET.**




**5. ONCE IN PLACE, SECURE THE BRACKET BY SQUEEZING AND TIGHTENING THE SCREW WITH A PHILLIPS SCREWDRIVER.**



**6. REPLACE CAP.**



7. REPEAT STEPS 2-3 FOR TOP BRACKET. PLACE TOP BRACKET AROUND CUBICLE EDGE AND SLIDE DOWN OVER DOOR GUIDE RAIL.

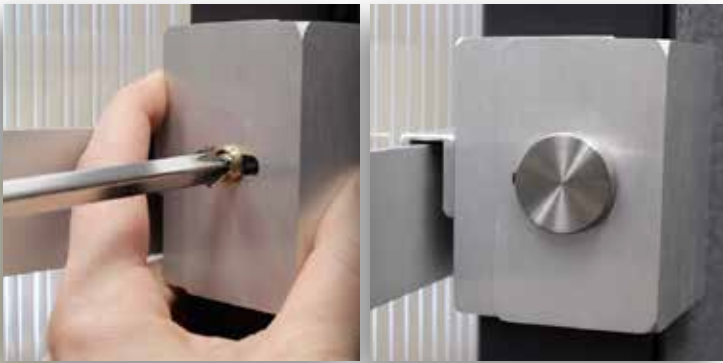

8. SQUEEZE BRACKET, TIGHTEN SCREW AND REPLACE CAP.



9. YOUR CUBICLE DOOR IS NOW INSTALLED.



Scan QR code for video tutorial