





## Freestanding Bracket Installation Instructions

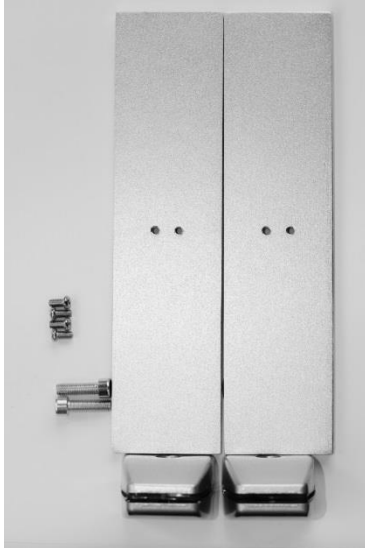

### Part list:


- (2) Aluminum feet
- (2) Clamp Brackets
- (4) Screws
- (2) Bolts

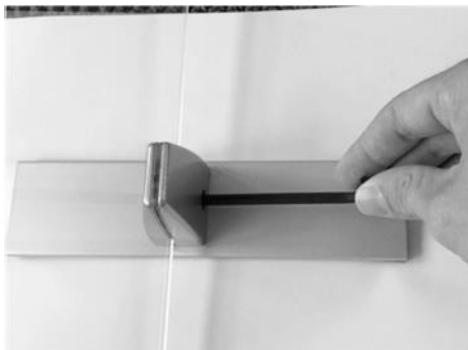

### Step 2

Place the screen into the mouth of the clamp bracket and tighten with the provided bolt.

The feet should be 4"-8" from the edge of the screen.

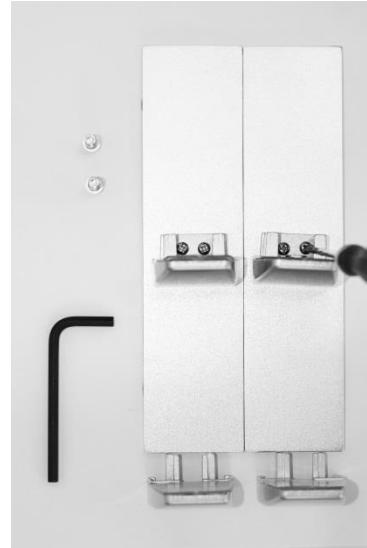

### Step 1

Attach the clamp brackets to the aluminum feet using provided screws.



### Step 3

Complete the same process for the second bracket and place the screen in the desired location.